



# ZXP399 DMX Controls and Accessories

## ZXP399 DMX controller 12V 8port

Black -

The ZXP399 DMX Controls and Wiring Accessories are to be used with our architectural and facade lighting luminaires (UniFlood C, M and G, UniStrip G4, UniEdge, UniDot G2, UniString and UniBar).;DMX Controls include a main controller, stand-alone controller, sub-controllers, DMX amplifier and DMX addressing device.;Main Controller: Industrial computer that can control up to 6,000 DMX universes.;Stand-alone Controller: Fits all medium applications with up to 700 DMX universes.;Wiring accessories include leader and jump cables with male and female IP67 connectors and end-caps.;Addressing Device: Hand-held device that can write DMX addresses to a whole run on-site within minutes.;DMX Amplifier: Compact, IP65 and low-power repeater that can amplify the DMX signal for up to 100 metres.

### Product data

General information	
Protection class IEC	Safety class III
CE mark	CE mark
Material	Aluminium
Colour	Black
Operating and electrical	
Input Voltage	12 DC V

Mechanical and housing	
Overall length	228 mm
Overall width	197 mm
Overall height	66 mm

Approval and application	
Ingress protection code	IP20 [ Finger-protected]

Product data	
Full product code	871951494733700


## ZXP399 DMX Controls and Accessories

Order product name	ZXP399 DMX controller 12V 8port
EAN/UPC – product	8719514947337
Order code	911401779642
SAP numerator – quantity per pack	1
Numerator – packs per outer box	1

SAP material	911401779642
Copy Net Weight (Piece)	1.550 kg



### Dimensional drawing

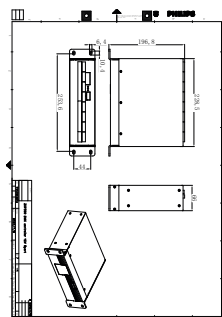

ZXP399 DMX controller 12V 8port

